

How to change flexible buttons on a Panasonic telephone system.

- Leave handset on hook and press 'Program'.
- Press the flexible button you wish to change.
- Use your navigation dial to scroll up and down through the different options.
- When you have found the one you want, press your 'enter' or 'store' key.
- Lift your handset to exit the program.