

How to change the internal ringtone on a Panasonic telephone system.

- Leave handset on hook.
- Press 'Program' followed by the intercom button twice.
- The large 24 key phone has 32 ringtones to choose from, whereas the small 8 key phones only have 8.
- Use your navigation dial to scroll through and listen to them.
- Press your 'store' or 'enter' key when you have found the one you want.
- Lift your handset to exit the program.